

SDQ5PIR
Instruction manual

SDQ5PIR Manual



Safety instructions

- **Caution! This professional device needs to be installed by qualified personnel only.**
- Please check the carton box for any kind of damage on reception of the goods. In case of a damaged carton, please contact your dealer before opening the carton.
- !!!! Danger !!!! Exposure to high sound levels may cause a permanent hearing loss. Individuals vary considerably to sound pressure level induced hearing loss but nearly everyone will lose some hearing if exposed to high sound pressure levels for a sufficient amount of time. Therefore it is recommended that all persons exposed to equipment capable of producing high sound pressure levels, such as this amplifier, be protected by hearing protection while installing or operating this unit.
- Read all documentation before operating your equipment.
- Keep all documentation for future reference.
- Save the carton and packing material even if the equipment has arrived in good condition.
- Should you ever need to ship the unit, use only the original factory packing.
- Do not spill water or other liquids into or on the unit.
- Make sure power outlets conform to the power requirements listed on the back of the unit.
- Do not use the unit if the electrical power cord is frayed or broken.
- Always operate the unit with the AC ground wire connected to the electrical system ground.

- Set level controls on amplifiers all the way down during power-up to prevent speaker damage if there are high signal levels at the inputs.
- Do not connect the inputs / outputs of amplifiers or consoles to any other voltage source, such as a battery, mains source, or power supply, regardless of whether the amplifier or console is turned on or off.
- Power down & disconnect units from mains voltage before making connections.
- Do not use the unit near stoves, heat registers, radiators, or other heat producing devices.
- Do not operate equipment on a surface or in an environment which may distort the normal flow of air around the unit. If the unit is used in an extremely dusty or smoky environment, the unit should be periodically "blown free" of dust.
- Do not remove the cover. Removing the cover will expose you to potentially dangerous voltages.
- Do not drive the inputs with a signal level higher than that required to drive equipment to full output.
- Do not run the output of any amplifier back into another input.
- In case of mal-function this device should be serviced by qualified service personnel only.
- This unit has NOT been designed for use in mobile applications, such as: mobile discobars, mobile PA systems, Live bands, audio rental systems, ...


Features


- The Apart SDQ5PIR powered loudspeaker set is a versatile and very compact, easy to use, plug and play sound system. It consists of an amplified loudspeaker with a 5.25" woofer, a high frequency unit and a second linkable passive loudspeaker, powered by the second amplifier built into the active speaker. The speakers are magnetically shielded.
- The speakers can be remote controlled via the included infrared remote control, RS232 serial port or an optional wall control panel with or without local input. The auto power off function switches off the power amplifier when no audio signal is present for a certain time. This time window can be adjusted using RS232 commands.
- Further benefits are: adjustable maximum level, multiple inputs: unbalanced on mini-jack and balanced on euroblock + additional input via optional wall control unit. All inputs can be gain adjusted, used individually or mixed together (except optional wall control panel local input source: this input cannot be mixed with the A or B or A+B inputs).
- The automatic power on function will power up the speaker automatically when a sufficiently high input signal is present at one of the selected inputs. The threshold (AUPTRG) can be adjusted via RS232 control to suit your needs.
- Active 2 way bass-reflex speaker system
- Ideal for monitor, Audio-Video applications, multimedia applications
- Powerfull 5.25" woofer and 1" tweeter
- Mounting brackets, IR remote control and power cord included
- 2 x 30 watts dynamic output power.
- Enhanced bass response by DTB reflex tuning
- Multifunction led indicator: standby (orange), on (green), overload (red), off (led not lit)

- Hi-Q balanced inputs
- Stereo inputs on standard 3.2 mm mini stereo jack, compatible with headphone and line level outputs (Computers, smartphones, portable media players, tablets...)
- Input sources A, B or via optional wall panel (WI)
- Inputs A and B can be mixed together or selected individually by infrared remote control or RS232
- Adjustable input gain for each input, A, B, AB and WI.
- Magnetically shielded
- Stylish design, suited for placement in corners
- Very high efficiency, high output
- Standby mode for low power consumption
- Controllable via infrared remote (included), RS232, wall panels (optional)
- RS232 control for increased integration in automated audio systems using standard 9 pin serial cable.
- RJ45 remote wall panel connector (not compatible with computer networks or other types of remote control cabling)
- These speakers have been carefully packed at the factory. Open the carton box and remove the speakers from the packing. Do not use sharp objects. Place the speakers on a flat surface. The mounting brackets, infrared remote control unit, power cord and speaker interconnection wire are included in the packing,
- When the product shows signs of damage caused by transportation, contact your dealer immediately. Damage due to transport and rough handling is not covered by the manufacturer warranty.
- The SDQ5PIR complies with CE regulations.

Rear panel

1. **Volume control:** set the desired level. The level set here will also be the maximum possible level when operating the unit remotely (infrared or RS232 commands).
2. **Treble control:** add or decrease the high frequencies. Adding high frequencies may improve intelligibility. Adjust to the desired level: push the + or - button once to increase or decrease the treble tone control in steps of 2 dB. Push both + and - buttons simultaneously to reset the treble tone control to neutral position.
3. **Bass control:** add or decrease the low frequencies. Decreasing bass can improve the intelligibility of spoken messages, especially in reverberant rooms: push the + or - button once to increase or decrease the bass tone control in steps of 2 dB. Push both + and - buttons simultaneously to reset the bass tone control to neutral position.
4. **On/Off:** turn the unit on or off with this button. When the unit is switched ON, the status led will be lit (green).
5. **Status led:** multifunctional led: this led is orange in standby mode, green when the speaker is active and red when an overload or clipping occurs.
6. **RS232 port:** standard SUB D9 connector for serial control.

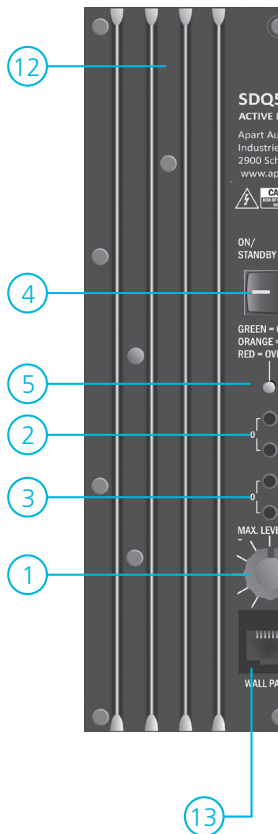

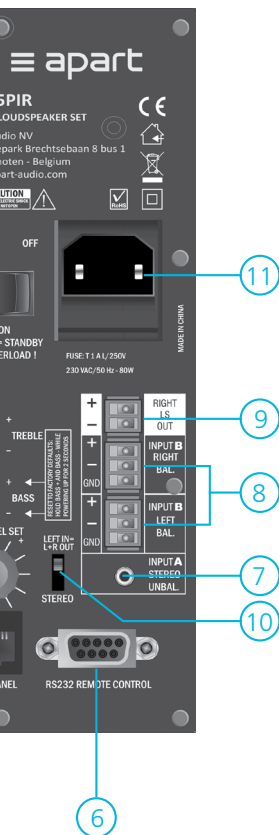

7. **3, 5 mm stereo jack input A:** connect your unbalanced line level signals here.
8. **Balanced line inputs B:** connect your balanced line level signals here.
9. **Speaker output:** connect the right speaker (slave) here. Mind the polarity!!! Connect + to + and - to -.
10. **Mode switch:** this switch turns your SDQ5PIR in a full stereo or a very compact mono system. When switched to mono mode, use the "Left" input only. The audio signal from the left input will sound through both speakers.
11. **Mains socket:** connect the supplied mains cord here. This socket contains a 1 A slow acting fuse. Use a screw driver to flip out the fuse compartment to access a broken fuse. When this fuse blows frequently you should return the SDQ to your dealer for service.
12. **Heat sink:** the heat sink will warm up during operation! This is normal.
13. **Wall panel connector:** standard RJ45 connector for connection of an optional wall control panel: ACP, ACPL or ACPR. This connection is NOT COMPATIBLE with other networks, such as computer networks etc. Do not attempt to connect anything but the optional SDQ5PIR wall control panels.

RS232 communication

Communication with SDQ5PIR via RS232 is done with simple ASCII commands and replies. The port settings are 19200 Baudrate, 8 data bits, no parity and 1 stop bit. The physical connection is as described below:

Standard 9 pin serial cable, wired straight through (no null modem cable!). Maximum wire length depends on cable quality and influence from external interference.

Pin 2: TX data: data transmission output

Pin 3: RX data: data reception input

Pin 5: GND: ground

Other pins are not used.

NOTE: when the unit is in standby mode, it may not respond to the first command sent to the unit, unless you send the command "**SET STANDBY OFF<CR>**". If you want to send any other command while the unit is in standby mode, it will wake up from standby and reply "**STANDBY OFF<CR>**". After that, resend the command and it will be executed.

An instruction has at least a command and an attribute. In many cases, there are extra values needed, like a source name/character or a value. From here we assume that you are familiar with RS232 communication protocols and connections. If not, please read the user manual of your control device first.

Instructions always have to be ended with <CR>, carriage return. Line feed <LF> characters will always be omitted, however SDQ5PIR can use (and echo) <LF> after a <CR>. Instructions are not case sensitive!

The 4 possible commands are: **SET**, **GET**, **INC** and **DEC**. With the INC and DEC command, a "step value" can be specified. See the table below for details (in the value column).

Operating settings:

SDQLVL is the volume level of the speaker system. Possible values are: OFF (mute = -64) or any value between -63 (lowest) and 0 (highest volume level). E.g. you want to set the volume to -20: "SET SDQLVL -20 <CR>"

The unit will reply: "SDQLVL -20<CR>"

MAXLVL is the maximum allowed volume level. E.g. if you don't want anyone to set the SDQ level higher than -10, set the MAXLVL parameter to -10. All volume related commands will ALWAYS be related to the MAXLVL setting. E.g. if the MAXLVL is -10 and you enter the command "SET SDQLVL -20<CR>", the SDQ5PIR will set the level relative to the MAXLVL, which was -10.

Please note that the absolute maximum number of volume steps is limited to 64 steps. 1 volume step corresponds to 1.25 dB.

The MAXLVL parameter is therefore considered as the master volume. If you want to mute the speaker, you can set the MAXLVL parameter to OFF.

BALANCE sets the balance between left and right channel. Possible values vary between -31 and 31.

Equalizer:

EQBASS sets the level of the bass.

EQTREB sets the level of the treble.

The value must be between -14 and 14 in steps of 2. If a different value is used (e.g. "5"), it will be changed to the closest match.

Configuration settings:

SELECT is input source selection, a possible command could look like this: "**Set select AB<CR>**". In this case, both inputs A and B will be mixed together by the SDQ5PIR unit. Possible values are A, B, AB or WI. WI is the local input of the optional wall control

IPGAIN is input gain. Each source input has its own gain setting so the source (A, B or WI) needs to be specified. The value can be between 0 and 3 in steps of 1. One gain step corresponds to 3.75 dB. If an invalid value is used or no source is specified, "**ERROR: Value Invalid!<CR>**" will be replied. Otherwise, the reply will be "**Command Executed!<CR>**"

A command to set the input gain of source A to 1 looks like this: "**SET IPGAIN A 1<CR>**"

AUPTRG: auto power trigger level. Range from 0 to 30. Higher values will increase the trigger level.

RS232 settings:

All RS232 settings are binary values, they can be ON or OFF.

If **ECHO** is on, all received characters are echoed back. This can be handy when programs like hyperterminal are used.

LF is Line Feed. Line Feed is an ASCII character (0x0A) which is sometimes used to let the cursor jump to the next line. SDQ5PIR always omits the line feed character. However, when LF is on, there will be put <LF> character behind each <CR> character. This is both the case for echoing as for messages sent by SDQ5PIR. Please take a look to following example: in both cases, the user sends the following string: "**GET SDQLVL<CR>**".

With ECHO on and LF off, this will be returned by SDQ5PIR:

"GET SDQLVL<CR>" (command)

"SDQLVL -16<CR>" (reply)

In case both ECHO and LF are on, it will be like this:

"GET SDQLVL<CR><LF>"

"SDQLVL -16<CR><LF>"

BS is Back Space. This is also an ASCII character. In case BS and ECHO is on, SDQ5PIR will reply <BS><SP><BS> each time when a <BS> is received. <SP> is the space character. This setting is only intended to have a "nice" text when used with programs like Hyperterminal.

VALFB means value feedback. Possible values are on or off. When value feedback is on, the SDQ5PIR will reply its setting after a value has been changed, such as SDQLVL.

Control settings:

BACKCT: set the controls at the back of the unit on or off. NOTE: when set to off, you can NOT operate the unit from the back panel controls!

WALLCT: set the control of the optional wall control panel on or off.

IRRMCT: set the control by infrared remote on or off.

AUTOPW: set the time for the sleep function. When no audio signals are detected, the speaker will go to sleep mode after the AUTOPW time has elapsed. When set to 0, the AUTOPW function is not active. Values between 0 and 30 can be specified. 0 = inactive, 1 = auto power off after 1 minute etc... Default value is 15 minutes.

Restore Factory Settings:

The factory defaults are shown in the RS232 commands table. In order to restore the factory default settings, enter the following command: "SET RESTORE ON<CR>"

This function can also be executed without using RS232 commands. In that case, power off the speaker. While pushing BASS + and - buttons on the rear panel simultaneously, power up the speaker with the power switch. The multifunction led will be orange. Release the BASS + and - buttons two seconds after powering up. All factory defaults will be restored.

Restore Factory Settings:

The SDQ5PIR can be switched to Standby mode with the IR remote control or with the "SET STANDBY ON<CR>" instruction. Leaving Standby mode can also be done with IR remote controller or the "SET STANDBY OFF<CR>" instruction. If an RS232 instruction is sent when the amplifier is in Standby mode or during power on, and the amplifier is not ready, it will answer "STANDBY ON<CR>". Please wait until the speaker is operational (green led at the back is lit) and resend the instruction.

When the SDQ5PIR is in standby mode, the AUPTRG function will not be able to wake up the speaker.

In standby mode, the SDQ5PIR can only be activated by a "SET STANDBY OFF<CR>" command, or by cycling the power switch on the unit.

Attribute	Description	Commands	Value	Factory default
SDQLVL	Volume level	GET, SET, INC, DEC	OFF (-64) -63 to 0	0
MAXLVL	Maximum allowed level	GET, SET	BACK, OFF (-64) -63 to 0	BACK
BALANCE	Left - right balance	GET, SET	-31 to 31	0
SELECT	Source selection	GET, SET	A, B, AB, or WI	AB
EQBASS	Equalizer bass	GET, SET	-14 to 14 (stepsize = 2)	0
EQTREB	Equalizer treble	GET, SET	-14 to 14 (stepsize = 2)	0
STANDBY	Standby state	GET, SET	ON or OFF	OFF
IPGAIN	Input gain	GET, SET	0 to 3	A,B,WI at 0 AB at 2
ECHO	RS232 echo	GET, SET	ON or OFF	OFF
LF	RS232 line feed	GET, SET	ON or OFF	OFF
BS	RS232 backspace	GET, SET	ON or OFF	ON
VALFB	RS232 value feedback	GET, SET	ON or OFF	ON
BACKCT	Back panel control	GET, SET	ON or OFF	ON
WALLCT	Wall panel control	GET, SET	ON or OFF	ON
IRRMCT	Infrared remote control	GET, SET	ON or OFF	ON
AUTOPW	Auto power off	GET, SET	0 to 30	0 (OFF)
AUPTRG	Auto power trigger level	GET, SET	0 to 9	1
INFO	settings information	GET	NA	NA
HWVRSN	Hardware version	GET	NA	NA
SWVRSN	Software version	GET	NA	NA
RESTORE	Restore factory defaults	SET	ON	NA

Infrared remote control

The included infrared remote control unit is powered by a standard CR2025 3V lithium battery.

Before first use, carefully remove the transparent battery saver.



When the battery is empty, replace with the same type only. Slide out the battery holder from the remote control unit, remove the empty battery and put a fresh one in place. The battery holder has a "+" mark on it. Make sure you insert the battery and holder in the right way!



If you don't use the remote for an extended period of time, remove the battery and store it in a safe location. This will avoid possible damage or corrosion from battery leakage.

Warning:

Do not attempt to recharge, disassemble, or incinerate this type of battery. Keep all batteries away from children. Dispose of used batteries promptly and as regulated by applicable laws.

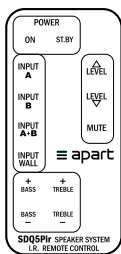

function	IR command	function	IR command
Power ON	{12}	Level Down	{06}
STANDBY	{1A}	MUTE	{09}
Input A	{01}	Bass UP	{0C}
Input B	{04}	Bass DOWN	{00}
Input A + B	{07}	Treble UP	{0D}
Input WALL	{0A}	Treble Down	{0F}
Level UP	{03}		

SDQ5PIR device code is {807F}

Infrared commands have been coded according to the NEC® protocol.

Technical specifications

speaker type	2 way bass reflex, active
tweeter size	1"
woofer size	5.25"
input impedance stereo jack input A	5 k ohms
input sensitivity stereo jack input A	175 mVrms (-15 dBV)
input impedance balanced input B	22 k ohms
input sensitivity balanced input B	175 mVrms (-15 dBV)
tone control bass	+ - 14 dB @ 100 Hz in 2 dB steps
tone control treble	+ - 14 dB @ 10 kHz in 2 dB steps
balance control	+ - 31 steps ; 1.25 dB per step
input gain adjustment	0 to 3 ; + 3.75 dB per step
dynamic output power	2 x 30 watts
max SPL 1 m	101 dB
SPL 1 W / 1 m	86 dB
frequency range	45 - 20 kHz
THD	< 0.07%
S/N ratio	> 90 dB
power supply	230 VAC / 80 W max
fuse rating	T 1 AL / 250 V
IP rating	40
mounting system	U-bracket
grille material	steel

woofer cone material	polypropylene
main construction material	ABS plastic
dimensions h x w x d	252 x 182 x 170 mm
net weight	2.85 kg (active) ; 1.75 kg (slave)
shipping weight	6.2 kg (1 set)
shipping dimensions (mm)	270 x 210 x 440
accessories supplied	power cord, bracket, manual, infrared remote control unit, slave speaker connection wire
remote control unit battery type	lithium CR2025 3v
applicable in 100 V	yes
applicable low impedance	yes
active	yes
operating temperature	-10 to +40° C
relative humidity	10 to 90% non condensing

**developed
by**
Apart Audio NV
Industriepark Brechtsebaan 8 bus 1
2900 Schoten - Belgium

Company names, product names and trademarks are property of their
respective owners.

Apart-Audio specifications are subject to change without notice.

